

INTERIOR DOOR ROUGH OPENING INFORMATION

PRE-HUNG SINGLE

ROUGH OPENING WIDTH = DOOR SIZE + 2"
ROUGH OPENING HEIGHT = DOOR SIZE + 2"
(FRAME SIZE IS 1-1/2" OVER DOOR WIDTH)

DOUBLE DOOR with BALL CATCHES

ROUGH OPENING WIDTH = DOOR SIZE + 2"
ROUGH OPENING HEIGHT = DOOR SIZE + 2"

DOUBLE DOOR with T-ASTRAGAL

ROUGH OPENING WIDTH = DOOR SIZE + 2-1/2"
ROUGH OPENING HEIGHT = DOOR SIZE + 2"

POCKET DOOR

ROUGH OPENING WIDTH = 2X DOOR SIZE + 1-3/4"
ROUGH OPENING HEIGHT = 84-1/2"

BI-FOLDS

FINISHED OPENING WIDTH IS NOMINAL DOOR WIDTH
FINISH OPENING HEIGHT IS 80-1/2"
(DOOR HEIGHT IS 79")

BI-FOLD ROUGH OPENINGS

ROUGH OPENING WIDTH = DOOR SIZE + 2"
ROUGH OPENING HEIGHT = DOOR SIZE + 2"

BI-PASS

FINISHED OPENING WIDTH IS DOOR SIZE LESS 1"
FINISHED OPENING HEIGHT IS 81- 3/4"

MIRROR BI-PASS

FINISHED OPENING WIDTH IS DOOR SIZE LESS 1"
FINISHED OPENING HEIGHT IS 80-1/2"
FINISHED OPENING WIDTH IS DOOR SIZE LESS 1"
FINISHED OPENING HEIGHT IS 81- 3/4"


INSWING INTERIOR & EXTERIOR DOORS

SINGLE RH

SINGLE LH

FRENCH RH

FRENCH LH

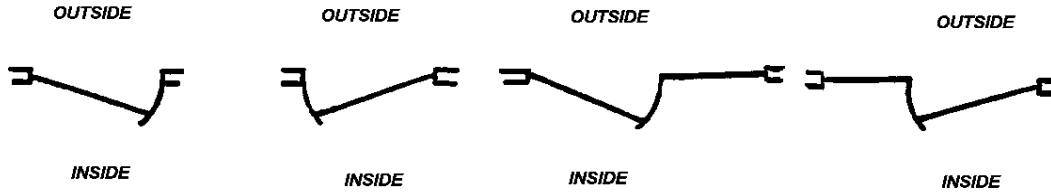


OUTSWING EXTERIOR

OUTSWING SINGLE RH

OUTSWING SINGLE LH

OUTSWING DOUBLE RH

OUTSWING DOUBLE LH

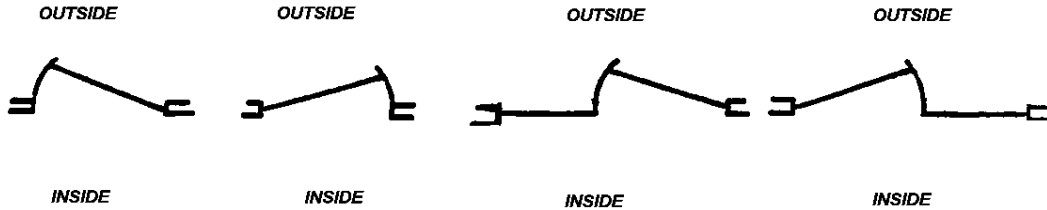

LOUVER INTERIOR DOOR UNITS

Newt says, "We need to know which way the slats are pointing AND what hand you need, So, as you PULL the door TOWARD you, do you want (A) the slats pointing up and LH, (B) the slats pointing UP and RH, (C) the slats pointing DOWN and LH or (D) the slats pointing Down and RH?"

NON CLOSET HUNG

CLOSET HUNG



(A)

(B)

(C)

(D)

SLATS POINTING UP
LH

SLATS POINTING UP
RH

SLATS POINTING DOWN
LH

SLATS POINTING DOWN
RH

**STANDARD INTERIOR DOOR TCBS HARDWARE LOCATIONS
1-3/8" THICK DOOR WITH 3.5 HINGES**

